

LAVAMAT W 1000

Washing machine

Operating instructions



Dear customer,

Please read these operating instructions through carefully.

Please make sure you read the safety instructions on the first pages of these operating instructions! Keep the operating instructions for future reference. Pass them on to any future owners.



With the warning triangle and/or by means of key words (**Danger!**, **Caution!**, **Attention!**), information is emphasized which is important for your safety or the correct functioning of the appliance. It is essential that this information is observed.



This symbol guides you step by step when operating the appliance.



Next to this symbol you receive additional information and practical tips on using the appliance.



Tips and information about the economical and environmentally friendly use of the machine are marked with the clover.

These operating instructions contain information about how to independently solve any problems which may arise. See "Troubleshooting".

If this information is not sufficient, please contact your local Customer Service Centre. Addresses and phone numbers can be found in the separate "Guarantee Conditions/Service Departments" (supplied with the appliance).

In connection with this please refer to the "Service" section.

Printed on environmentally friendly paper.
Whoever thinks ecologically also acts ecologically

Contents

Safety instructions	5
Disposal	7
Environmental tips	7
Important features of your appliance	8
Description of the appliance	9
Front view	9
Control panel	10
Program selector	10
Program selector as progress indicator	12
Temperature selector	12
EASY-CARES button	12
Final spin speed button	12
RINSE HOLD button	12
Pilot light	12
Compartment for detergent and conditioner	13
Consumption values and time requirement for selected programs	14
Before using your machine for the first time	14
Preparing the washing cycle	15
Sorting out and preparing washing	15
Types of washing and care symbols	16
Washing powders and conditioners	17
Which washing powder and conditioner?	17
How much washing powder and fabric softener?	17
Using a water softener	17
Run wash cycle	18
Brief instructions	18
Loading the washing	18
Add detergent/conditioner	19
Selecting the washing program	20
Start the washing program, set the final spin speed or select RINSE HOLD	21
During the washing program	21
End of wash cycle/Removing the washing	22

Program tables	23
Washing	23
Separate rinsing	24
Separate fabric softening/starching/impregnating	24
Separate spinning	24
Separate pre wash	25
Cleaning and caring	26
In daily use	26
Cleaning the operating panel	26
Control panel	26
Detergent compartment	26
Washing machine drum	27
Precautionary measures in the event of a risk of frost	27
What to do, if...	28
Trouble Shooting	28
If the washing results are not satisfactory	30
Perform emergency drain	31
Cleaning the suds pump	32
Technical data	33
Power supply	33
Information for the electrician	33
Service	34
Index	35

Safety instructions

The safety standards of AEG electric appliances are in keeping with the recognised rules of technology and the law governing the safety of appliances. Nevertheless as a manufacturer we are committed to familiarise you with the following safety instructions:

General safety

- Repairs to the washing machine may only be carried out by qualified personnel. As a result of incorrect repairs considerable dangers for the user may result. Please contact our customer service department or an authorised AEG dealer in the event of repairs being necessary.
- Never start the washing machine if the mains flex is damaged or the control panel, work top or base area are so damaged that the inside of the washing machine is accessible.
- Switch off the washing machine before carrying out any cleaning, care and maintenance work! You can make totally sure by pulling the mains plug out of the socket or – if permanently connected – by switching off the fuse switch in the fuse box or by unscrewing the plug fuse right out.
- Never use the flex to pull the plug out of the socket but pull the actual plug.
- Do not spray the washing machine with a water jet – danger of an electric shock!
- During washing programs at a high temperature, the glass of the door heats up. Do not touch!
- Allow the suds to cool down before cleaning the pump or carrying out emergency emptying.
- Small animals can nibble at power cables and water hoses. Electric shock hazard and danger of damages from water!

Installation, connection and initial operation

- Please follow the separate **Installation and connection instructions**.
- Run the first washing cycle without washing (COTTONS 95, with half the amount of washing powder) to remove residues on the drum and suds container caused during production.
- If the machine is delivered during the winter at freezing temperatures: store the washing machine for 24 hours at room temperature before starting it.

Safety of children

- Often children are not aware of the dangers involved in handling electrical equipment. Therefore please ensure they are adequately supervised whilst the appliance is on and do not allow children to play with the washing machine – there is a risk that the children may lock themselves in the appliance.
- Packaging (e.g. plastic films, polystyrene) could be dangerous for children – danger of suffocation! Keep packaging away from children.
- Please make sure that children or small animals do not climb into the drum of the washing machine.
- When disposing of the washing machine pull out the plug, cut off the flex, dispose of the plug and remaining flex and destroy the door lock. This hinders children from locking themselves in and endangering their lives.

Intended use

- Only use the washing machine to wash normal domestic washing. If the washing machine is used for any other purpose or is incorrectly used, the manufacturer adopts no liability for any damages which may result.
- Conversions or changes to washing machines are not permitted due to safety reasons.
- Only use washing powder which is suitable for washing machines. Please follow the instructions of the washing powder manufacturers.
- The washing may not contain any flammable solvents. Please observe this above all when washing prewashed laundry.
- Do not use your washing machine for dry cleaning.
- Dyes and bleaching agents may only be used if specifically permitted by the manufacturer of these products. We cannot be held liable for any damages.
- Please only use water from the mains. Only use rain or industrial water if it meets the requirements of DIN 1986 and DIN 1988.



Disposal

Dispose of the packaging!

Dispose of the packaging material of your washing machine correctly. All packaging materials are environmentally friendly and can be disposed of without any danger or burnt in the refuse incinerator.

The plastic parts can be reused:

- The external plastic cover and the bags inside are made of polyethylene (marking >PE<).
- The padding is made of CFC free expanded polystyrene (marking >PS<).

The boxes are made from recycled paper and should be returned to the old paper collection.

Dispose of your old washing machine!

When you eventually stop using your washing machine please bring it to the nearest recycling centre or to your dealer who will take it back for a small fee.



Environmental tips


- For normally soiled washing you do not need a prewash. In this way you can save washing powder, water and time (and not pollute the environment!).
- The washing machine works particularly economically if you exploit the maximum loads.
- For small quantities of washing use half to two thirds of the recommended washing powder quantity.
- By suitable pretreatment stains and a certain amount of dirt can be removed. Then you can wash at a low temperature.
- Wash slightly soiled to normally soiled cottons with the energy saving program.
- Often you do not need a fabric softener. Just try it! If you use a washing machine your washing will become soft and fluffy without softener.
- For medium to high water hardness (from hardness range II, see "Washing powder and conditioners") you should use a water softener. The washing powder can then always be measured as for hardness area I (= soft).

Important features of your appliance


- Setting the program using the program selector and temperature selector.
- **Stain program** for effectively treating stained washing.
- Button **EASY CARES** for careful treatment of easy-care fabrics.
- **Energy saving program** for lightly soiled to normally soiled cottons.
- Maximum Spin speed **1000 revolutions per minute**.
- Speed for the final spin can be reduced to 600 revolutions per minute.
- **RINSE HOLD** can be selected: the washing remains in the final rinse water, it is not spun.
- **Automatic load recognition** with fuzzy logic: sensor controlled washing process with variable number of rinse cycles, water quantity dependent on foam and load, controlled spin etc, ensuring best washing and rinsing results with the most economical adapted water consumption.
- **3-chamber detergent compartment** for washing powder and fabric softener: stain remover in prewash chamber
- **ÖKO lock**: The Öko lock ensures 100% effective detergent usage. The Öko valve closes off the wash tub from the drainage system during all wash programmes.
- **Scoop ribs** in the washing machine drum: ensure washing is wet fast and equally.
- **Anti-unbalance control system**: for stability and smooth running.
- **Water protection**.

Description of the appliance

Front view

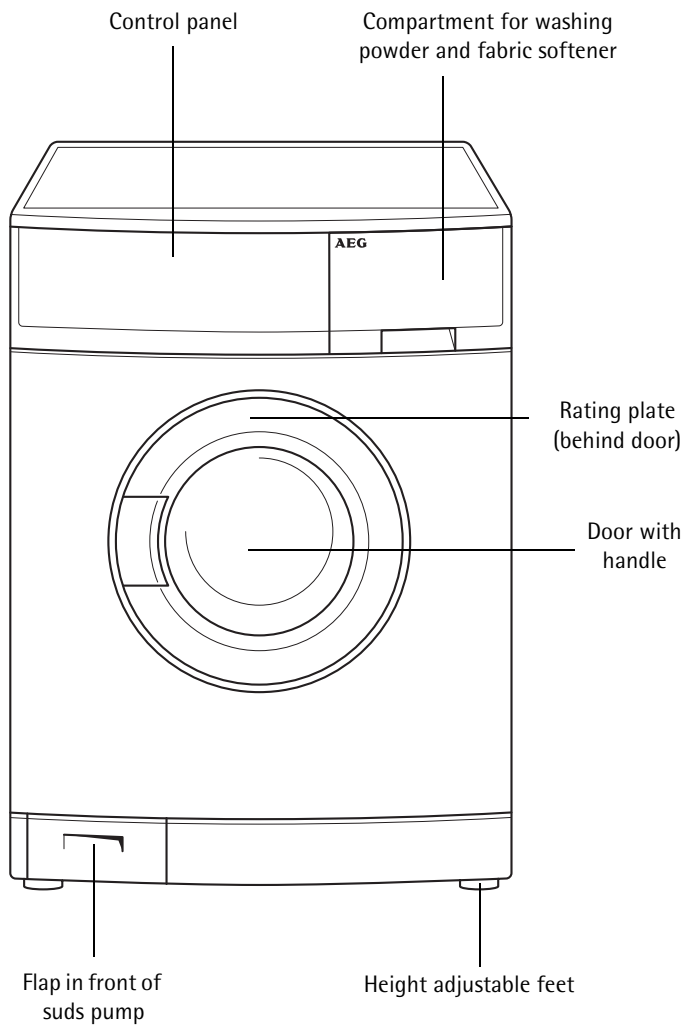

Control panel

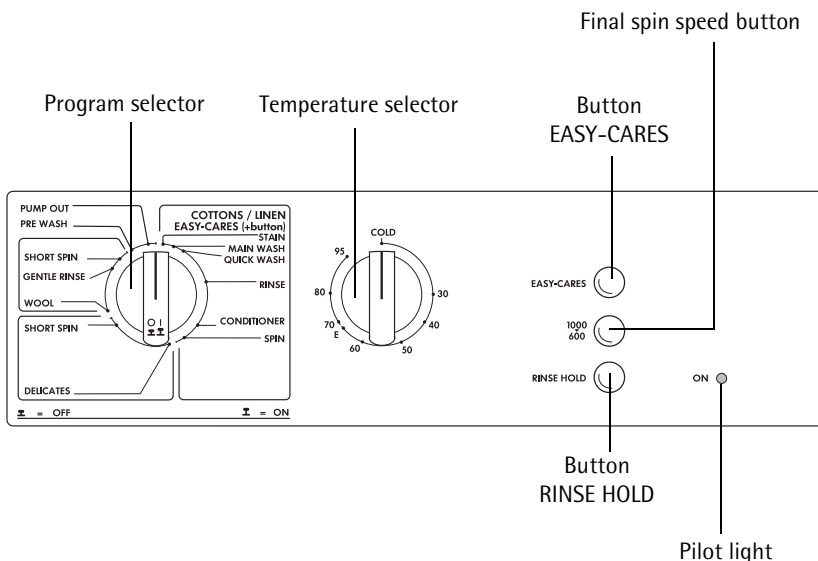


Program selector

You can switch the washing machine on and off with the program selector.

- To switch on the machine:
pull out the program selector.
- To switch off the machine:
press in the program selector

Additionally, you can use the program selector to set the type of washing cycle. Different setting positions have the following effect:

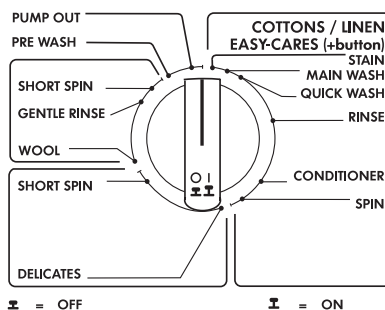

Program group COTTONS/LINEN, EASY-CARES (+button)

• STAIN

For treating stained washing with stain remover (extended main wash with time optimised stain remover phase).

• MAIN WASH

Main wash cycle for normally soiled washing (washing, rinsing/conditioning, spinning).

- **QUICK WASH**

Shortened main wash cycle for lightly soiled washing.

- **RINSE**

Separate rinse, e.g. for rinsing hand-washed fabrics (spin according to the selected washing cycle).

- **CONDITIONER**

Conditioner rinse (or starching). Liquid conditioner or starch is added from the  compartment during the rinse.

- **SPIN**

Spinning after a RINSE HOLD, or separate spinning of hand washed textiles.

Program group DELICATES

- **DELICATES**

Main wash cycle for delicates (Washing, rinsing/conditioning, short spin).

- **SHORT SPIN**

Spin after a RINSE HOLD or separate gentle spin of hand washed delicates.

Program group WOOL

- **WOOL**

Main wash cycle for woollens and especially sensitive fabrics (Washing - conditioner - short spin).

- **GENTLE RINSE**

Separate gentle rinse, e.g. for rinsing hand-washed fabrics (1 Rinse cycle and subsequent short spin).

- **SHORT SPIN**

Spin after a rinse hold or separate short spin of hand-washed woollens and especially sensitive fabrics.

PREWASH

Separate pre wash (approx. 20 minutes at maximum 40° C) and subsequent pumping out.



After PRE WASH, the main wash cycle must be set as desired, the program does not continue automatically.

PUMP OUT

Pumping out the water after a RINSE HOLD (without spinning).

Program selector as progress indicator

The program selector serves as a progress indicator by moving clockwise until the end of the program is reached.


Temperature selector

On the temperature selector you can set the following temperature levels:

COLD, 30, 40, 50, 60, E, 70, 80, 95



Position E (energy-saving program) is suitable for lightly to normally soiled cottons; temperature reduced to approx. 67°C.

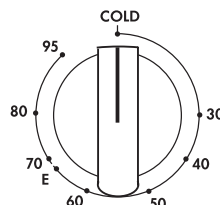

EASY-CARES button

For easy-care washing. This button is effective when a program from the COTTONS/LINEN, EASY-CARES (+button) program group is selected on the program selector.



Final spin speed button

With this button you can reduce the maximum speed for the final spin.



RINSE HOLD button

With the rinse hold setting the washing is left in the final rinse water and is not spun.




Pilot light

The pilot light ON shows as soon as the washing machine is on.



Compartment for detergent and conditioner

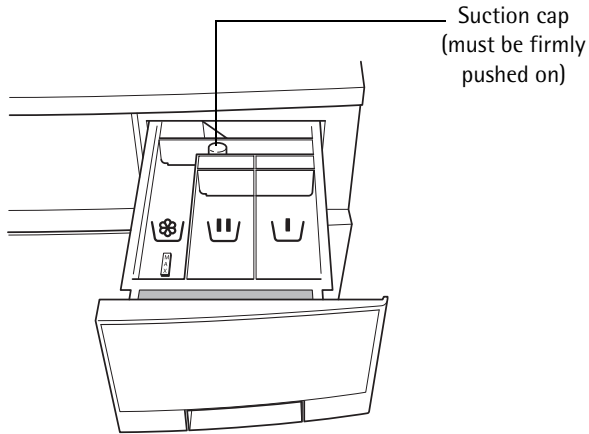

-  Compartment for prewash agent or stain remover.
They are added right at the beginning of the washing program for PRE WASH or added during the main wash at the optimal time for STAIN.
-  Compartment for main washing detergent and if required water softening agent.
They are added at the beginning of the main wash cycle.
-  Compartment for liquid conditioners (fabric softener, starch).
They are added during the final rinse.

Consumption values and time requirement for selected programs

The values in the following table were determined under standard conditions. They provide a useful guide for household use.

Program selector	Button	Temperature selector	Type of washing	Load in kg	Water in litres	Energy in kWh	Time in minutes
MAIN WASH		95	Cottons/Linen	5	59	1.80	119
		60	Cottons/Linen	5	59	1.10	119
		40	Cottons/Linen	5	59	0.60	119
	EASY-CARES	40	Easy cares	2.5	48	0.40	86
DELICATES		30	Delicates	2.5	57	0.45	67
WOOL		30	Woollens	1	52	0.35	67

Before using your machine for the first time

-  Slightly pull the detergent compartment out of the control panel.
-  Pour about 1 litre of water through the detergent compartment into the washing machine.
Only once this has been done does the suds container close and the ÖKO lock can function correctly.
-  Run through a wash cycle without washing (COTTONS 95, with half the amount of washing powder).
This removes residues on the drum and suds container caused during production.

Preparing the washing cycle

Sorting out and preparing washing

- Sort out washing according to the type and care symbol (see "Types of washing and care symbols").
- Empty the pockets.
- Remove any metal parts (paper clips, safety pins etc.).
- To prevent washing from getting damaged and forming bundles: close zips, button up duvet covers and pillow cases, tie up loose straps such as from aprons.
- Turn clothes made from double layer fabric inside out (e.g. anoraks, sleeping bags).
- For knitted coloured fabrics as well as woollens and fabrics with appliqué: turn inside out.
- Put small and delicate pieces (baby socks, tights) in a washing net, a pillow case with zip or in larger socks.
- Handle curtains with special care. Remove metal strips or plastic fins or tie them in a net or a bag.
We accept no liability for damages.
- Keep coloureds and whites separately in different washing cycles, otherwise whites will turn grey.
- New coloured fabric often contains excess dyes. Wash this laundry separately for the first time.
- Mix small and large pieces of washing! This improves the effectiveness of the wash and the washing is distributed better when spinning.
- Shake out washing before putting it into the machine.
- Unfold the washing before putting it into the drum.

Types of washing and care symbols

The care symbols help to choose the correct washing program. The washing should be sorted according to the type and care symbol. The temperature specifications in the care symbols are always maximum specifications.

Cottons

Fabrics made of cotton and linen with this care symbol are not sensitive towards mechanical strain and high temperatures.

The COTTONS/LINEN program is suitable for this type of washing.

Linens

Fabrics made of cotton and linen with this care symbol are not sensitive towards mechanical strain.

The COTTONS/LINEN program is suitable for this type of washing.

Easy care washing

Fabrics such as finished cottons, cotton mixtures and synthetics with this care symbol require a softer mechanical treatment.

The EASY-CARES program is suitable for this type of washing.

Delicates

Fabrics such as layered fabrics, microfibres, synthetics, curtains with this care symbol require a very gentle treatment.

The DELICATES program is suitable for this type of washing.

Woollens and very delicate types of washing

Fabrics such as wool, wool mixtures or silk with this care symbol react very sensitively to mechanical stress.

The WOOL program is suitable for this type of washing.

Woollens with  (wool mark) may only be washed in the washing machine if they bear the addition "does not felt" or "suitable for machine washing".

Fabrics with the care symbol  (Hand washing) or  (Do not wash!) may not be washed in the washing machine!

Please follow care instructions "wash separately" and "wash separately several times"!

Washing powders and conditioners

Which washing powder and conditioner?

Only use washing powders and fabric softeners suitable for washing machine use. As a general rule follow the instructions of the producers.

How much washing powder and fabric softener?

The amount to be used depends on

- the load:

If the washing powder producer does not make any specifications for small loads, use a third less for half loads, and for very small loads only use half of the amount of washing powder recommended for a full load.

- the degree of soiling of the washing:

For only slightly soiled washing use less washing powder. Follow the instructions of the washing powder producer and load.

- on the degree of hardness of the tap water:

The harder the water, the higher the dosage! You will find the quantities to use according to water hardness on the washing powder packaging.

Liquid detergent

Add liquid detergent using the measuring cup provided by the detergent industry. Please follow the instructions on the package.

Using a water softener

For a medium to high degree of water hardness (from water hardness area II) water softener should be used. Follow the manufacturers instructions! Then always dose detergent for hardness area I (= soft). You can find information about the local degree of water hardness from your water utility.

Specifications of water hardness

Water hardness	Water hardness in °dH (degrees of German hardness)	Water hardness in mmol/l (Millimol per litre)
I – soft	0 – 7	to 1,3
II – medium hard	7 – 14	1,3 – 2,5
III – hard	14 – 21	2,5 – 3,8
IV – very hard	above 21	above 3,8

Run wash cycle

Brief instructions

A washing cycle proceeds in the following steps:

-  Open the door, put in the washing.
-  Shut the door.
-  Add washing powder/conditioner.
-  Set the correct washing program.
 - Set the program selector to the desired washing program.
 - Set the temperature selector to the desired temperature.
-  Press the EASY-CARES button if required.
-  Pull out program selector.

The washing program starts automatically after six seconds.
-  Reduce the final spin speed or select RINSE HOLD if required.

You can alter this setting and the temperature during the entire washing cycle.

After the washing program has been completed:


-  The door remains locked for safety reasons for 1-2 minutes after the end of program.

Important! If the washing cycle ended with Rinse Hold, before opening the door, carry out a PUMP OUT, SPIN or SHORT SPIN.
-  Wait 1-2 minutes until the door unlocks before opening.
-  Open the door, remove the washing.
-  Push in the program selector. This switches the washing machine off.

Loading the washing

-  Sort the washing according to the type.
-  For information on correct preparation of the washing see "Types of washing and care symbols".
-  Open the door: pull the handle of the door.
-  Load the washing.
-  See the "Program tables" for the maximum load.
-  Firmly shut the door.

Caution! When shutting the door be careful not to catch any pieces of laundry! The fabric and machine could be damaged.

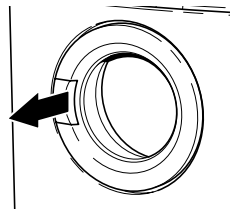

Add detergent/conditioner

 Pull out the compartment as far as it will go.

 Fill in detergent/conditioner.

 For information about washing powder and fabric softeners see section "Washing powders and conditioners".



 Compartment for prewash agent or stain remover.
They are added right at the beginning of the washing program for PRE WASH or added during the main wash at the optimal time for STAINS.

 Compartment for main washing detergent and if required water softening agent.
They are added at the beginning of the main wash cycle.

 Liquid conditioners (fabric softener, starch).
Important: Do not fill above the MAX mark. When using thick concentrated fabric conditioners and starches we recommend you dilute the concentrate with water to ensure trouble-free dispensing.
If using starch powder dissolve according to manufacturers instructions.

 Push the compartment completely in.


Selecting the washing program

- i** See "Program tables" for suitable program and the correct temperature for the respective type of washing.

Set the washing program


Attention! Program selector may only be turned clockwise!

-  Set the program selector to the desired washing program.

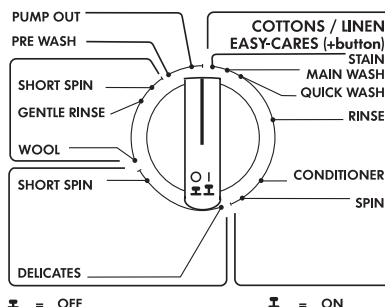

Set the temperature

-  Set the temperature selector to the desired temperature.

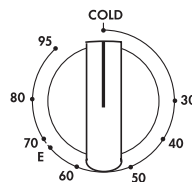

For easy-cares washing:

-  Press the EASY-CARES button.

- i** The EASY-CARES button can only be used with the COTTONS/LINEN programs. If used with any other program it will have no effect.



Start the washing program, set the final spin speed or select RINSE HOLD

-  Check whether the water tap is open.
-  To start the washing machine pull out the program selector.
The pilot light ON illuminates, the washing program starts automatically after six seconds.
-  If necessary reduce the final spin speed for the final spin or select RINSE HOLD.
 - Press the final spin speed button or
 - press the button  (RINSE HOLD).

If RINSE HOLD has been selected, the washing remains in the final rinse water and is not spun.



During the washing program

you can at any time

- alter the setting of the final spin speed,
- select RINSE HOLD,
- alter the temperature setting;
- press the EASY-CARES button

Other settings cannot be altered.

To interrupt the washing program prematurely:

-  Push in program selector.
-  Rotate the program selector clockwise to PUMP OUT.
-  Pull out program selector.

End of wash cycle/Removing the washing

The washing program normally ends with the final spin.

After PRE WASH:

 After PRE WASH, the main wash cycle must be set as desired, the program does not continue automatically.

 Set the main wash cycle desired.

After RINSE HOLD:

After a RINSE HOLD the water must be pumped out first or the washing spun:

 Release RINSE HOLD button.

 Rotate the program selector clockwise to SPIN or SHORT SPIN (washing becomes spun according to the program group selected and the final spin speed set),
or
rotate program selector clockwise to PUMP OUT (water is pumped out)

After the program is completed:

 The door remains locked for safety reasons for 1-2 minutes after the end of program.

 Wait 1-2 minutes until the door unlocks before opening.

 Open the door.

 Remove the washing.

 Push in the program selector. The washing machine is now off.

 Close the water tap.

 Pull the washing powder compartment out a little so that it can dry. Leave the door ajar for a while. This helps to prevent stagnant smells and helps to preserve the door seal.

Program tables

Washing

The following tables list the most commonly used and most useful programs.

Type of washing, care label	Max. load (dry weight) ¹	Program selector	Temperature selector	Additional button
Cottons 	5 kg	STAIN	95	
		MAIN WASH	95	
		QUICK WASH	95	
		Energy-saving program: STAIN	E	
Linen  	5 kg	STAIN	30, 40, 50, 60	
		MAIN WASH		
		QUICK WASH		
Easy-cares  	2,5 kg	STAIN	30, 40, 50, 60	EASY-CARES
		MAIN WASH		
		QUICK WASH		
Delicates 	2,5 kg (or 15-20m ² curtains)	DELICATES	COLD, 30, 40	
Wool ²   	1 kg	WOOL	COLD, 30, 40	

1) A 10-litre bucket contains about 2,5kg of dry washing (cotton).

2) Woollen clothing with woollen symbol may only be washed in the machine if they bear the addition "does not felt," "non-felting" or "washing machine resistant".

Separate rinsing

Type of washing	Max. load (dry weight)	Program selector	Additional button
Cottons/Linen	5 kg	RINSE	
Easy-cares	2,5 kg		EASY-CARES
Delicates	2,5 kg	GENTLE RINSE	
Wool	1 kg		

Separate fabric softening/starching/impregnating

Type of washing	Max. load (dry weight)	Program selector	Additional button
Cottons/Linen	5 kg	CONDITIONER	
Easy-cares	2,5 kg		EASY-CARES
Delicates	2,5 kg	GENTLE RINSE	
Wool	1 kg		

Separate spinning

Type of washing	Max. load (dry weight)	Program selector	Additional button
Cottons/Linen	5 kg	SPIN	
Easy-cares	2,5 kg		EASY-CARES
Delicates	2,5 kg	SHORT SPIN	
Wool	1 kg	SHORT SPIN	

Separate pre wash

Type of washing	Max. load (dry weight)	Program selector	Temperature selector	Additional button
Cottons/ Linen	5 kg	PRE WASH	COLD, 30, 40	
Easy-cares	2,5 kg			EASY-CARES
Delicates	2,5 kg			

Cleaning and caring

In daily use

- ☞ After the program has finished pull out the detergent compartment a little so that it can dry out.
- ☞ Only lean the door to after washing so that the washing machine is aerated from the inside and can dry out.
- ☞ Close the water tap.

Cleaning the operating panel

Control panel

Attention! Do not use household furniture polish or aggressive detergents to clean the panel and operating parts

- ☞ Wipe over the operating panel with a damp cloth. Only use warm water.

Detergent compartment



Now and again the detergent compartment should be cleaned.

- ☞ Pull out the detergent compartment as far as it will go.
- ☞ Remove the detergent compartment by pulling heftily.
- ☞ Remove the suction cap.

- ☞ Clean suction cap under running water.

- ☞ Clean the separate compartments with warm water from the back. A bottle brush is a useful help here.

- ☞ Push on the suction cap until the stop, so that it is sitting tightly.

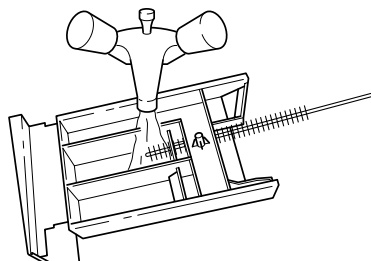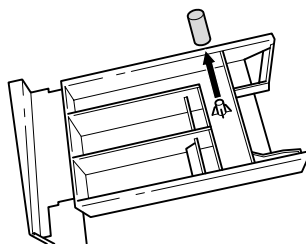

-  Clean the entire compartment area of the washing machine with a brush.
-  Insert the detergent compartment into the guides and push it in.

Washing machine drum

The washing machine drum is made from rust-free stainless steel. Rusty foreign bodies in the washing can cause rust deposits on the drum.

Attention! Do not clean the stainless steel drum with descaling agents containing acids, scouring agents containing chlorine or iron or steel wool. Our customer service department has suitable agents available.

-  Remove rust deposits on the drum with a stainless steel cleansing agent.

Door

-  Regularly check if there are deposits or foreign bodies in the rubber sleeve behind the door and remove them if applicable.

Precautionary measures in the event of a risk of frost

-  Damages caused by frost are not covered by the warranty! If the washing machine is in a room with a risk of freezing, in the event of a risk of freezing, an emergency emptying has to be done (see "Executing an emergency emptying"). Additionally:
-  Unscrew the inlet hose from the tap and place it on the floor.

What to do, if...

- i** The somewhat different, in comparison to older washing machines, whistling noise during spinning is due to the modern drive system.



Trouble Shooting

In the case of a malfunction try to solve the problem with the aid of the notes given here. If you call in customer service to resolve one of the malfunctions listed here, or an error in operating the machine, the customer service engineer's visit is not cost free, even during the period of guarantee.

Malfunction	Possible Cause	Remedy
Washing machine does not work.	Mains plug is not plugged in.	Insert mains plug.
	House fuse is defective.	Replace fuse or reset.
	Appliance is not switched on.	Switch on the appliance (pull out program selector).
The machine does not take in water.	Door is not closed properly.	Close door, lock must engage audibly
	Tap is closed.	Open tap.
	Sieve in the threaded fitting on the water inlet hose is blocked.	Unscrew the hose from the tap, remove the sieve and clean under running water
Washing machine vibrates during operation or is unstable.	The height adjustable threaded feet are not correctly adjusted.	Adjust the feet as per the installation and connection instructions.
	There is only very little washing in the drum (e.g. only a toweling dressing gown).	Does not impair function.
	Water could not be completely pumped out prior to spinning because – Drain hose is kinked or – Suds pump is blocked.	Check the drain hose and if necessary remove any kink or clean the suds pump and remove any foreign bodies from the pump housing.

Malfunction	Possible Cause	Remedy
Excessive foaming during the main wash.	Probably too much detergent was used	Dose detergent exactly in accordance with the manufacturer's instructions.
Water runs out from under the washing machine.	Threaded fitting on the water inlet hose is leaking.	Tighten the water inlet hose
	Drain hose is leaking.	Check drain hose and if necessary replace.
	Suds pump cover is not closed properly.	Close cover properly.
	Washing is trapped in the door.	Stop program, remove washing from the door, start a new program.
Softener is not washed in, compartment  for conditioner is full with water.	Suction cap in the compartment for conditioner is not correctly positioned or is blocked.	Clean detergent drawer, place suction cap firmly in position.
Appliance does not spin, water in the drum.	RINSE HOLD selected.	Deselect RINSE HOLD.
Washing is not spun properly, water is still visible in the drum.	Drain hose is kinked.	Remove kink.
	Maximum pumping height (drain height 1 m above the floor on which the machine is standing) exceeded.	Please contact customer service who have a retrofit kit for pumping to heights of greater than 1 m.
	Suds pump is blocked.	Switch off the machine and unplug from the mains, clean the suds pump.
	In the case of siphon connection: siphon is blocked.	Clean siphon.
It is not possible to open the door.	The door is locked due to safety reasons.	Wait 1-2 minutes after the end of the program.
Rinse water is cloudy.	This probably due to a detergent with a high silicate content.	No negative impact on the rinsing results, possibly use liquid detergent.

If the washing results are not satisfactory

If the washing is gray and scale has built up in the drum.

- Too little detergent was used.
- The wrong detergent was used.
- Special soiling was not pre-treated.
- Program or temperature not set correctly.
- When using component detergents, the individual components were not used in the correct proportions.

If there are still gray stains on the washing

- Washing soiled with ointments, grease or oils was washed with too little detergent.
- Too lower temperature was used for washing.
- A common cause is that softener – particularly that in concentrated form – has got onto the washing. Wash out any such spots as quickly as possible and use that particular softener carefully.

If at the end of the last rinse foam is still visible

- Modern detergents can cause foam also in the last rinse. The washing is however sufficiently rinsed.

If there are white remnants on the washing

- This is an insoluble material contained in modern detergents. This is not the result of unsatisfactory rinsing. Shake or brush washing. Perhaps you should turn the washing inside out before washing in future. Reconsider choice of detergent, possibly use liquid detergent.

Perform emergency drain



Warning! Switch off the washing machine before an emergency drain!

If the washing machine no longer pumps out the water then an emergency drain must be performed.


Attention! The water which runs out of the emergency draining hose can be hot. There is a danger of scolding! Before an emergency drain first allow the water to cool down!



Have a flat container on hand to catch the water running out.



Fold down and remove the flap on the left of the base cover.

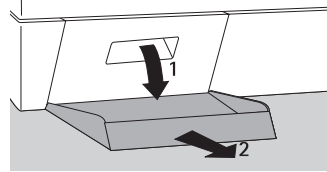


Undo the emergency drain hose from the mounting.



Pull the emergency drain hose out a little.




Place the container under the hose.

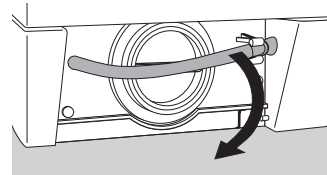

Undo and remove the emergency drain hose end plug by turning it in an anti-clockwise direction.

The water runs out. Depending on the amount of water it may be necessary to empty the container several times. Temporarily close the emergency drain hose again with the end plug.

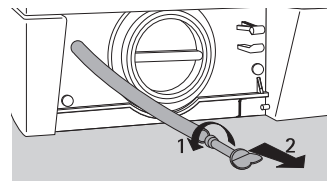

When the water is completely drained:



Press the end stop firmly back into the emergency drain hose.



Push the emergency drain hose back in a little and allow it to snap into the mounting.



Put on the flap and close.



The ÖKO lock does not function when the machine has been fully emptied. Therefore add approx. 1 liter of water before the next wash (pour in through the detergent drawer).

Cleaning the suds pump



Warning! Switch the washing machine off prior to cleaning the suds pump!



Next perform an emergency drain (see section above "Perform emergency drain").



Lay a cloth on the floor in front of the suds pump cover. Some water may run out.



Undo the cover on the suds pump in an anti-clockwise direction and remove.



Remove foreign body from the pump housing.



Check whether the pump impeller can be turned. (A jerky pump motion is normal.) If the impeller cannot be turned, inform customer service.






Replace cover (insert the stud on the cover into the guide slot) and tighten in clockwise direction.



Close emergency drain hose, push in and fix in place.



Close the flap.

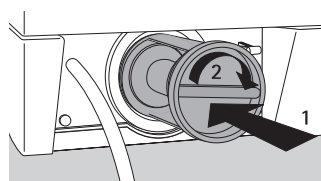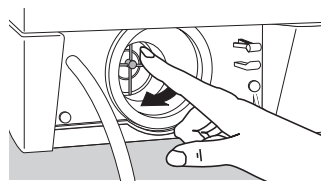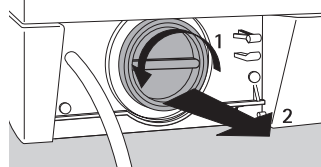

Technical data

Height x width x depth	85x60x60 cm
Depth with the door opened	95 cm
Height adjustability	approx. +10/-5 mm
Empty weight	approx. 85 kg
Full load (depending on the program)	max. 5 kg
Area of application	household
Drum speed when washing	max. 53 rpm ⁻¹
Drum speed when spinning	see rating plate
Water pressure	1-10 bar (=10-100 N/cm ² = 0.1-1,0 MPa)

This appliance complies with the following EC directives:

- 73/23/EEC of 19/2/1973 'Low voltage directive'
- 89/336/EEC of 3/5/1989 'EMC directive' including the Modification directive 92/31/EEC

Power supply

Please refer to the rating plate for specifications about the power supply. The nominal voltage stated on the rating plate and type of current must be identical with the nominal voltage and type of current at the point of installation. Also refer to the rating plate for the fuse required.

Information for the electrician

When connecting the appliance without a plug, care must be taken that this is done correctly. Please follow the relevant information in the "Installation and connection instructions" section.

For appliances with variable voltage settings, the switch-over diagram can be found on the cover of the connection box at the back of the appliance.

Service



In the chapter "Troubleshooting" some disturbances have been summarised, which you can solve yourself. If you do not find any helpful information there, please contact your local Customer Service Centre. Addresses and phone numbers can be found in the separate "Guarantee Conditions/Service Departments" (supplied with the appliance).

Be well prepared before you phone. This facilitates the diagnosis and the decision as to whether a customer service visit is necessary. With our checklist you can gather important information before making your call:

Make a note of the E/PNC number and the F number. They are both on the rating plate behind the door of your washing machine.

E/PNC no.

F no.

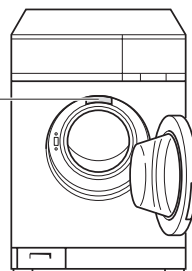

If possible establish:

- How is the disturbance evident?
- Under what circumstances does the disturbance occur?

When do you incur costs even during the warranty period?

- if you could have solved the disturbance yourself with the help of the Troubleshooting table (see section "Troubleshooting"),
- if the customer service engineer has to make several journeys because he did not receive all the necessary important information before his visit and now e.g. has to fetch spares. You can avoid these extra trips by preparing your telephone call properly in the way described above.

Index

C

Conditioner 11, 13, 17, 19, 24
 liquid 13, 19
Cotton mixtures 16
Cottons 10, 16, 23, 24, 25
Curtains 15, 16
Customer service 27, 34

D

Delicates 11, 16, 23, 24, 25
Detergent 13, 17, 19
 remnants 30
Door opening 18, 22, 29

E

Easy cares 10, 12, 16, 20, 23, 24, 25
Energy saving program 8, 12, 23

F

Fabric softener 7, 9, 13, 17, 19

G

Gentle rinse 11

H

Hand washing 16

L

Linen 10, 16, 23, 24, 25
Liquid detergent 17

M

Main wash 10, 23
 detergent 13, 19
Microfibres 16

O

ÖKO lock 8, 14, 31

P

Pre wash 11, 19, 25
 detergent 13, 19
Program interruption 21
Pump out 11, 22

Q

Quick wash 11, 23

R

Rating plate 9, 34
Rinse 11
Rinse hold 8, 10, 12, 21, 22

S

Scale 30
Short spin 11, 24
Silk 16
Spin 8, 10, 11, 12, 21, 24
Stain 7, 8, 10, 19, 23, 30
Stain removers 13, 19
Starching 13
Suds pump 9, 32
Synthetics 16

W

Warranty 27
Washing
 coloured 15
 delicate 15, 16
 double layers 15
 easy care 16
 fabric softening 24
 lightly soiled 8, 12
 normally soiled 7
 slightly soiled 7, 17
 starching 19, 24
 unsatisfactory results 30
Washing powder 9, 17, 19
Water
 hardness 7, 17
 pumping out 11, 22
 softener 7, 13, 17, 19
Wool 11, 16, 23, 24

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

H 243 273 340 - 01-1097